



Traffic Safety Corporation
2708 47th Ave.
Sacramento, CA 95822-3806
Toll Free: 888.446.9255
Tel: 916.394.9884
Fax: 916.394.2809
Email: sales@xwalk.com
Web: www.xwalk.com

Wireless TS40
Flash Time Adjustment

Flash Time Adjustment

(Unless noted or requested, all flash times set to 30 seconds)

1. Locate “Flash Adjustment” access point in casing
2. Remove plug
3. Locate rotary dial inside opening
4. Insert small straight edge screwdriver into rotary slot
5. Turn dial to required flash time (see chart below)
6. After new flash time set reinstall plug
7. Repeat all steps above on all signs
8. Test and time each sign for proper flash time

Dial Setting	Flash Time (seconds)
“0”	15
“1”	20
“2”	30
“3”	45
“4”	60
“5”	90
“6”	120
“7”	150
“8”	180
“9 - 15”	240

Visit our web site: www.xwalk.com